


SCENT-IT-YOURSELF BEESWAX CANDLE

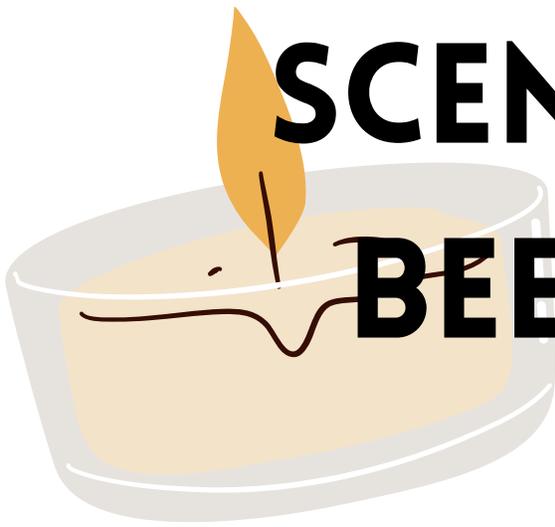

Supplies Included:

1. 1 glass container
2. Beeswax pellets
3. 1 wick
4. 1 wooden stick
5. 1 wick sticker



Supplies Needed:

1. Double boiler or a metal or glass bowl set on top of a small pot
2. Stove
3. Your preferred scent.
(Optional) Take a look at the next page for more information about how to use common household staples to scent your candle

This candle was scented with coffee grounds





CANDLE SCENTS

- Coffee beans
 - Add a pinch of grounds and/or several whole beans.
- Spices
 - Raid your spice cabinet for cinnamon, cloves, and nutmeg--or pre-mixed pumpkin or apple pie spice.
- Dried herbs
 - Include your favorite dried herbs, like rosemary, basil, or thyme. Make sure to chop these finely.
- Vanilla
 - Add a few drops of vanilla extract.
- Essential oils
 - The most commonly used candle scents, any essential oils you might already have can be used

All scents should be added to your candle wax once it's melted and removed from heat. Scents will smell stronger in the hot wax than in the final cooled candle.






INSTRUCTIONS

1. Add water to a large pot (just a few inches of water is fine) and bring to a simmer. Next, pour the wax pellets into the top part of the double boiler. (Fig. 1)
2. Let the wax melt until all the pellets have melted completely and the melted wax is transparent.
3. Remove from heat and let the wax cool for 5-10 minutes. This is the point when scents should be added, if using.
4. Add a wick to your container. Peel off both sides of the white circle sticker and stick it to the inside bottom on your container in the center. Place the metal tab of the wick on to the sticker to secure it. (Fig. 2)

1



2

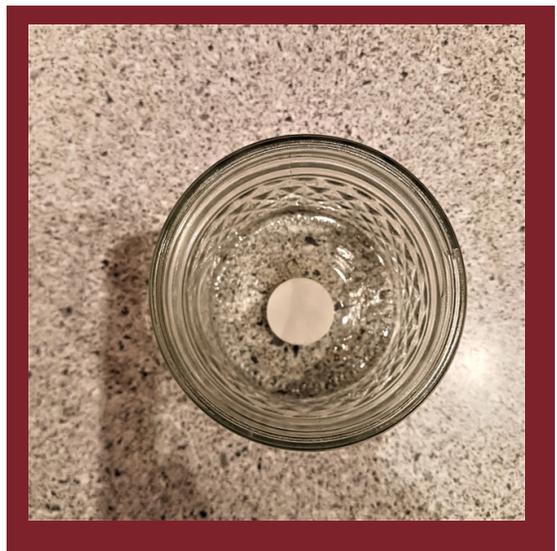



INSTRUCTIONS

5. Take the wooden stick and wrap the loose end of the wick around it. Wrap it enough times that the wooden stick sits on top on the container. This will keep the wick centered while the wax cools. (Fig. 3)

6. Pour the wax carefully into the container.

7. Let the container sit without moving it for 12 to 24 hours. Once it has fully set, remove the wooden stick and trim the wick to 1/4 inch. Wait 1 week before lighting your candle to ensure it has completely cured.

3

